


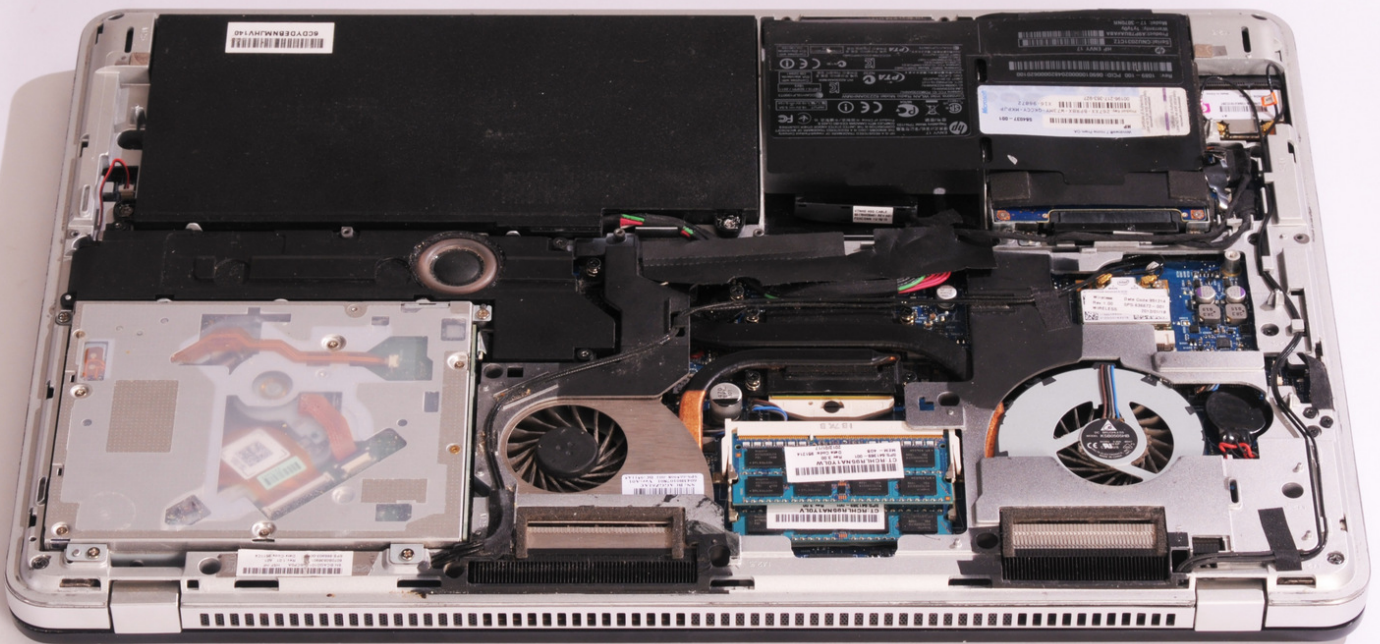

HP Envy 17-3070NR Back Cover Replacement

Replace the back cover.

Written By: Abby Lentz





TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-




Step 1 — Back Cover



 Before you begin taking apart the computer, make sure that it is completely powered off.

- Slide the release latch away from the nearest edge.
- Slide the back cover off of the computer.

Step 2

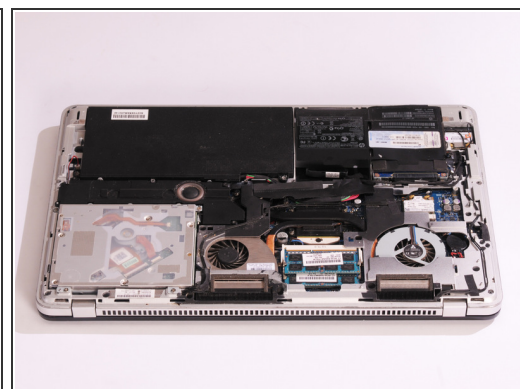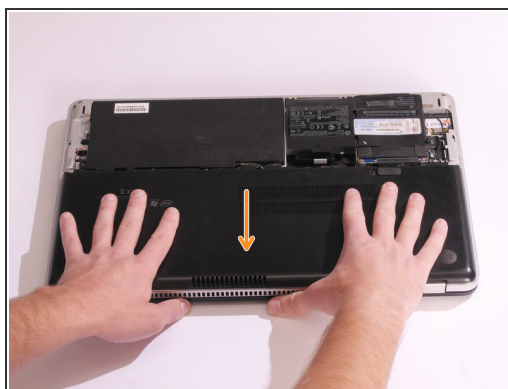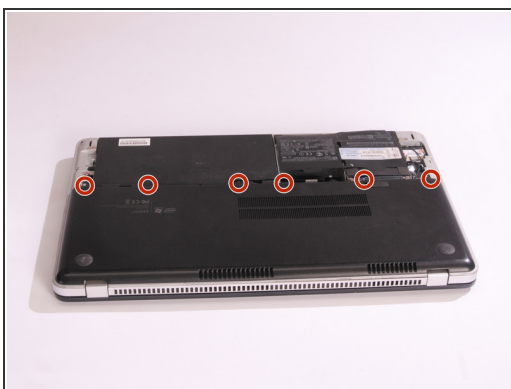

- Remove the six 3.7mm Phillips screws.
- Slide the back cover until it clicks, then lift it straight off.

To reassemble your device, follow these instructions in reverse order.

